

THERMOSTAT WIRES TO WIRING CENTRE MUST BE NO FURTHER THAN 25 METRES FROM THERMOSTAT TO WIRING CENTRE. CABLE SIZE 4 CORES + EARTH 1mm² CSA

PLEASE NOTE:
ELECTRICAL LOAD OF THERMOSTATS AND ACTUATORS IS NOT TO EXCEED 50VA TRANSFORMER CAPACITY. THEREFORE CALCULATE USING THE FOLLOWING:-
24V THERMAL ACTUATOR = 4VA
FH-WS OR FH-WP = 1VA

LEGEND:

- LIVE
- NEUTRAL
- EARTH
- UFH ROOM STAT LIVE
- SWITCH LIVE
- NSB ENABLE

ZONE 1 FH-WS DIAL ROOM THERMOSTAT
ZONE 2 FH-WS DIAL ROOM THERMOSTAT
ZONE 3 FH-WS DIAL ROOM THERMOSTAT

